

Administrative Information Only

NOTE: This system works with both 7506, 7507, and i2021 series phones.



Set the handset aside and remove the stickers on the back of the lifter so the adhesive material is showing. Press the lifter onto the phone as shown here.









Attach the Base Plate to the Charging Dock by matching the holes on the plate to the prongs on the Charging Dock and twisting to the right.



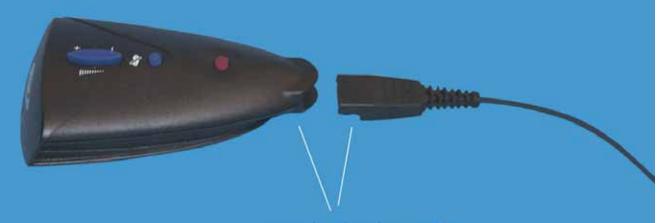

Attach a headset to the Remote by plugging the end of the headset cord into the bottom of the Remote and pushing in until it snaps.

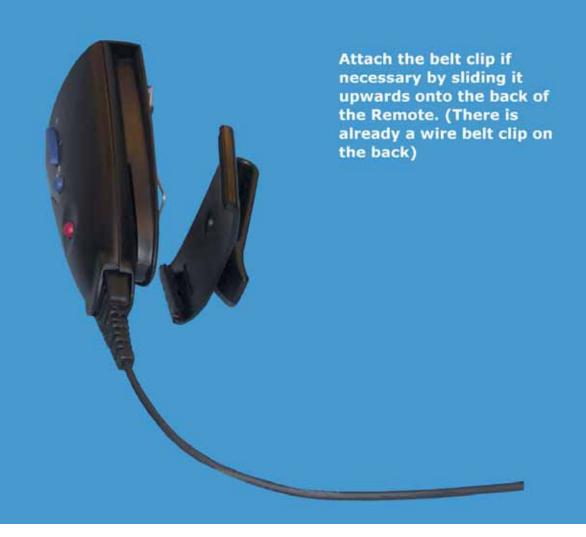







Transmit Settings

Telephone Settings



Battery Charge Indicator

Online Indicator

